



flexofold

sailboat propellers


Installations and operating instructions for 3-blade saildrive propeller. Owner must receive these instructions.

NOTE: Failure to follow these instructions will void warranty.

These instructions cover installation and operation of Flexofold Propellers unless they have been modified by Flexofold in which case a supplement will be provided.

Parts list:

1. Hub
2. Shaft (not supplied)
3. Spacer (not supplied)
4. Shaft nut
5. Tab washer
6. Shaft nut locking screw (M8x20mm)
7. Blade (3 ea.)
8. Pivot pin (3 ea.)
9. Tapered Pivot pin locking screw (3 ea. M8x25mm)
10. Cover plate
11. Cover plate screw (3 ea. M6x16mm)
12. Anode Zn or AlMg
13. Anode screw (M8x20mm)
14. Allen wrench 5mm
15. Allen wrench 6mm

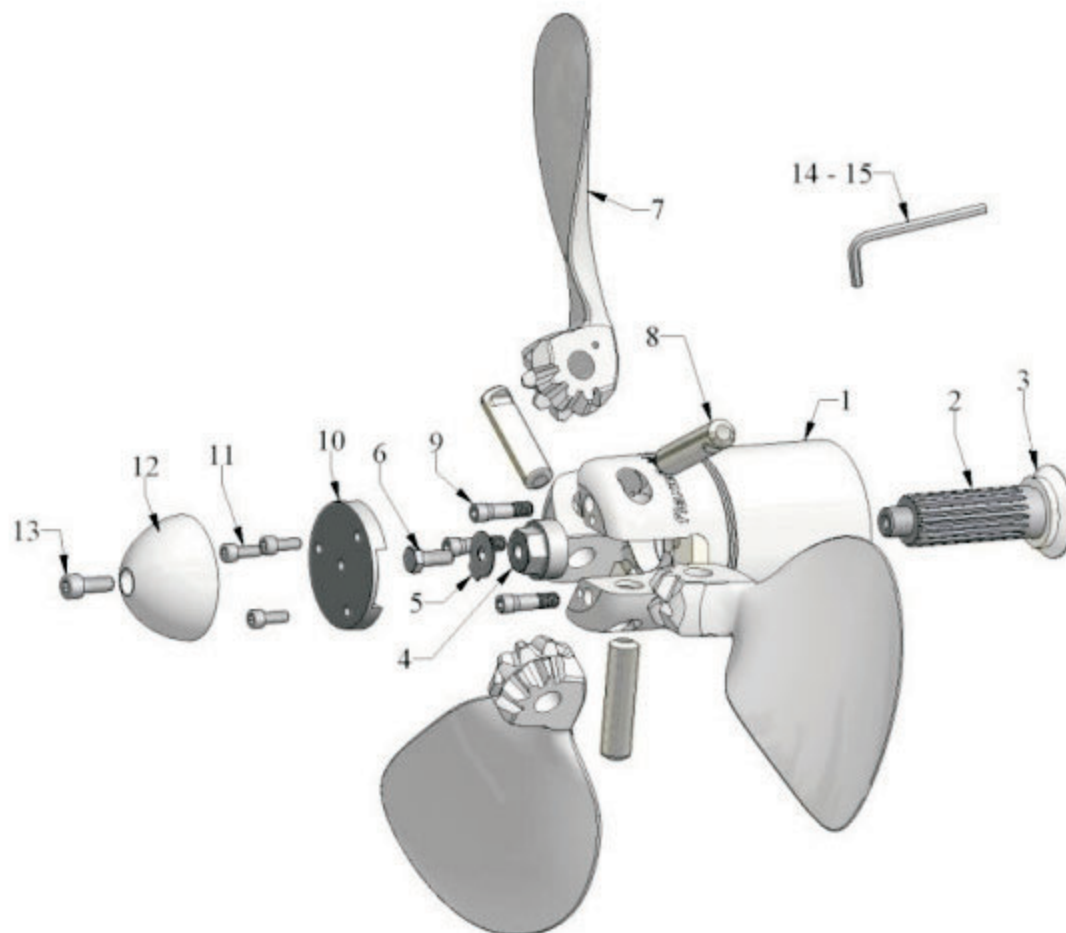



flexofold

sailboat propellers

Installations and operating instructions for 3-blade standard shaft propeller. Owner must receive these instructions.

NOTE: Failure to follow these instructions will void warranty.

These instructions cover installation and operation of Flexofold Propellers unless

Parts list:

1. Hub
2. Shaft (not supplied)
3. Wedge (not supplied)
4. Shaft nut
5. Crater screw
6. Blade
7. Pivot pin
8. Tapered pivot pin locking screw (M8x25mm special)
9. Coverplate
10. M6x10 screw
11. Anode
12. M8x20 screw
13. Allen wrench 4 mm
14. Allen wrench 5 mm
15. Allen wrench 6 mm

